


一、连接图 (Connection diagram)

二、请确认你的固件版本 (Please confirm your firmware version) !

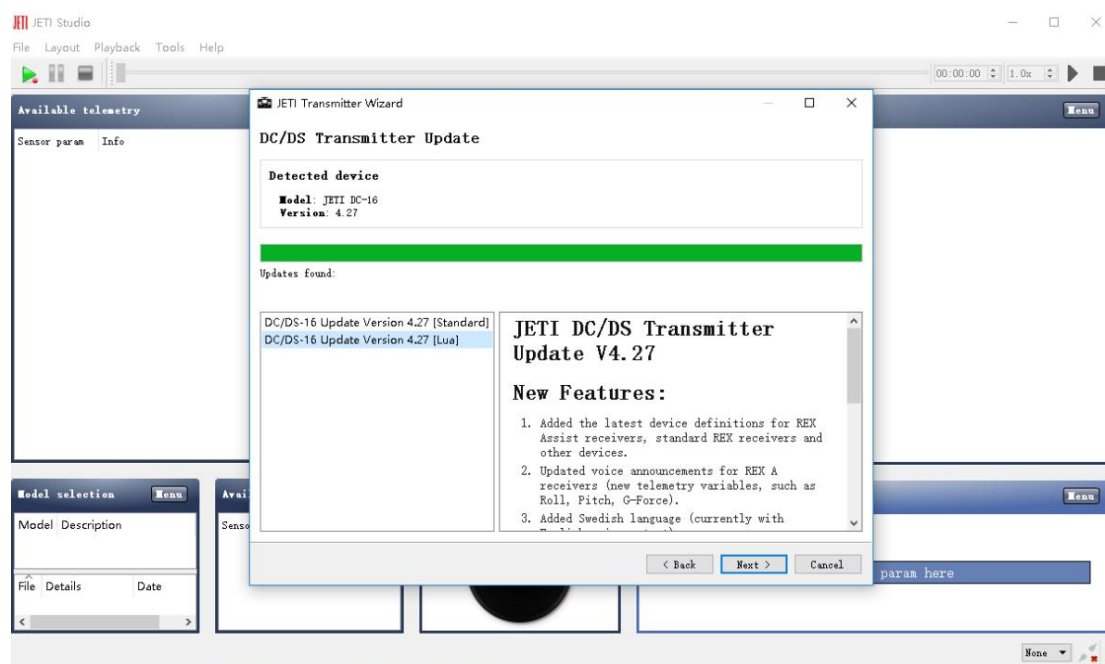

三、复制文件到 JETI 遥控器 (Copy Lua scrip to your transmitter)

1. 连接遥控器到计算机的 USB,

Connect the transmitter to your computer via USB.

2. 复制 VS_Jeti_LUA 的 App 目录里的内容到遥控器的 App 目录里。

Copy the contents of the Apps(VS_Jeti_LUA) folder to your transmitter, into

the existing folder "Apps"

3. 断开计算机连接。


Disconnect the USB port.


四、设置显示发动机状态 (Enable Display Engine Status)

Main Menu -> Applications




Select User Application


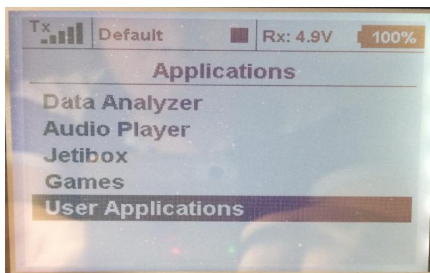


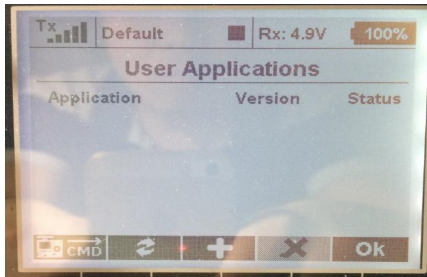


Press Add Key(+)

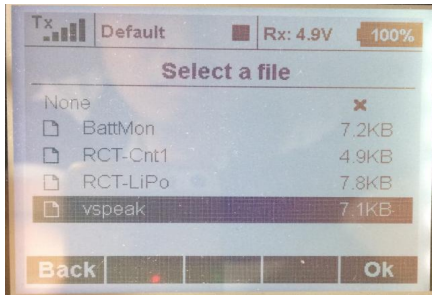


Select "vspeak"

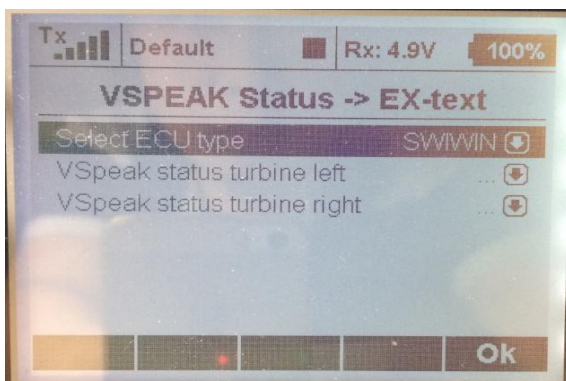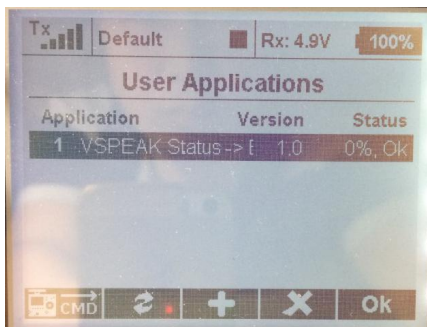


Select ECU Type -> SWIWIN

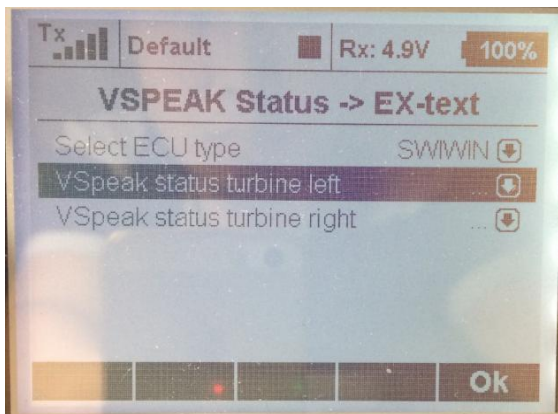

Select "VSpeak Status Turbine left"

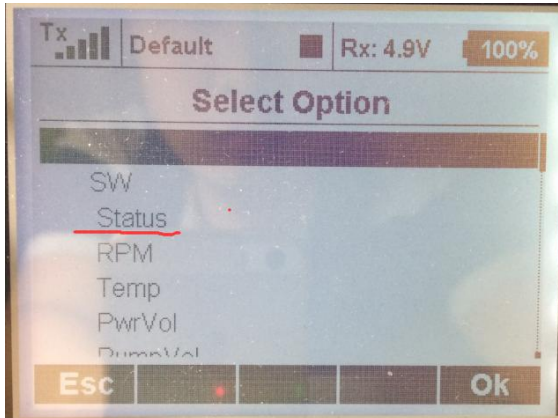


Select "SW" "Status"

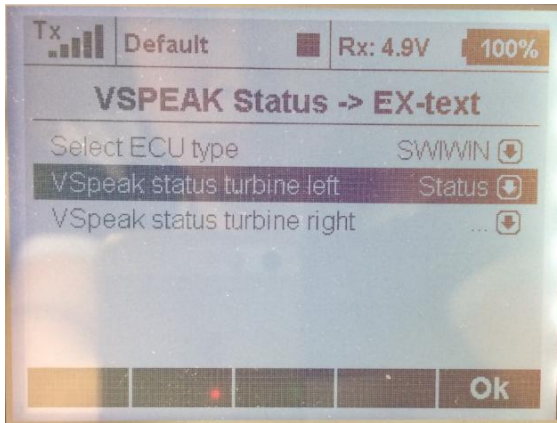




五、添加发动机状态到遥控器的主界面

Add the engine status to the main interface of the transmitter

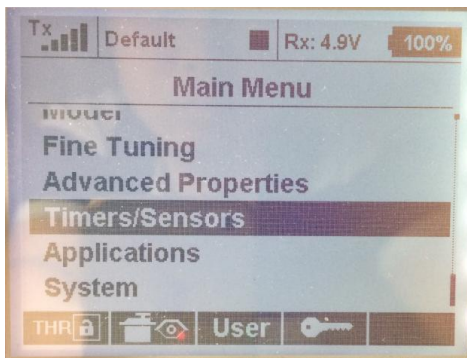

Main Menu -> Timers/Sensors

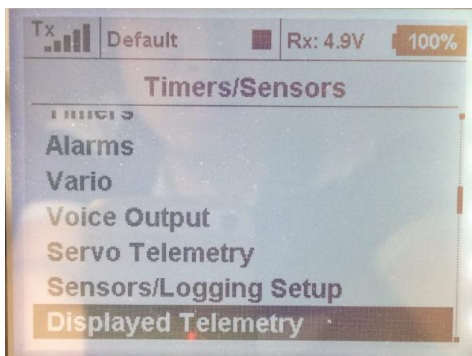

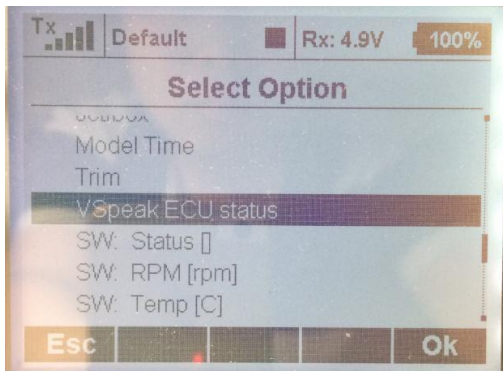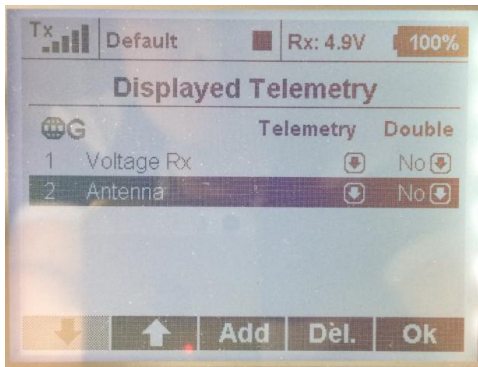

Add this Following options


“VSpeck ECU Status”

“SW: RPM[rpm]”


“SW: Temp[C]”

“SW: PwrVol[V]”

“SW: PumpVol[V]”


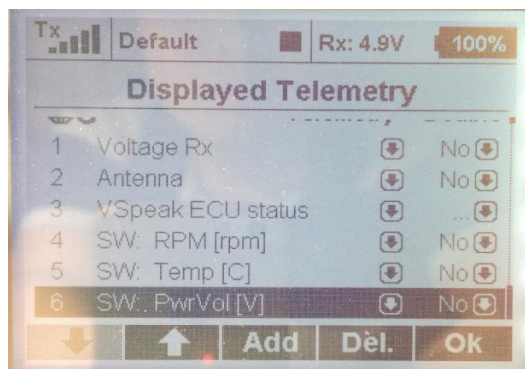


显示效果如下(The display effect is as follows)

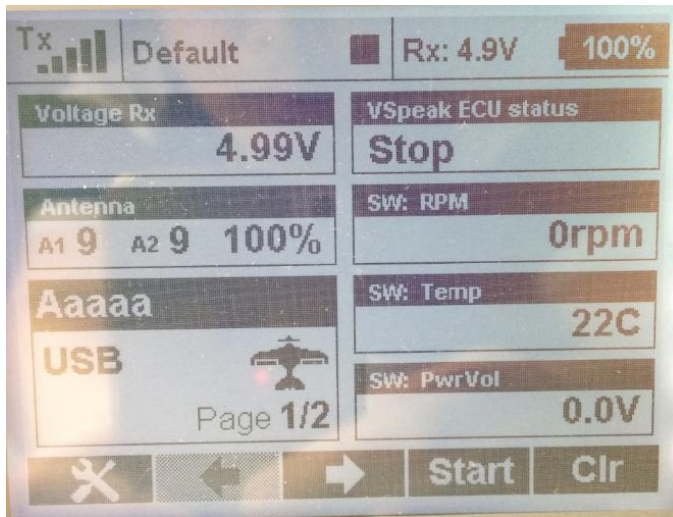


六、 JetiBox


Main Menu -> Applications -> Jetibox

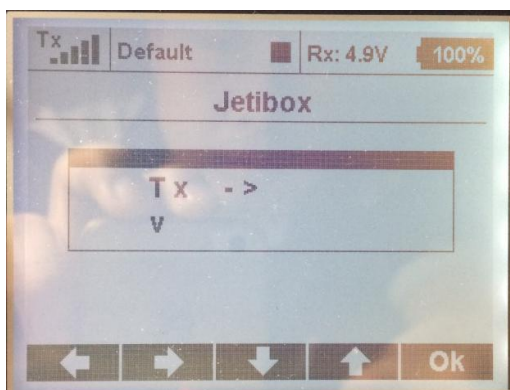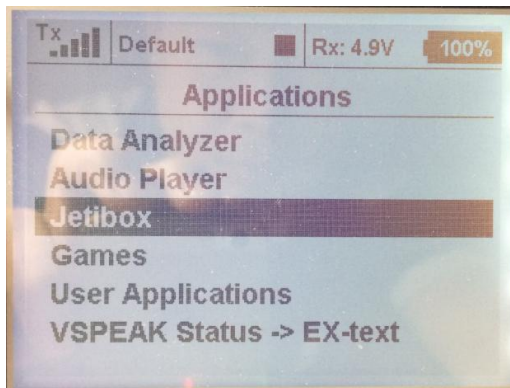

Press Right Key to Select "MX"

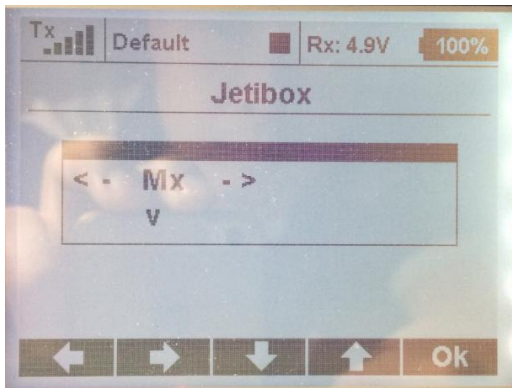

Press Down Key To Display SWIWIN Menu

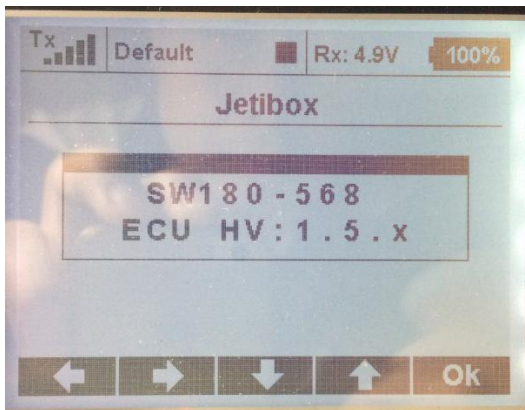

Jetibox 可以设置 ECU 的油泵点火电压和加速曲线

Jetibox Can Set the ECU' Pump Ignition voltage and RPM ACC

